ENGLISH

# G7 PRO WIRELESS

Wireless Controller for Xbox, PC & Mobile

**Model No.: GameSir-G7 Pro**
**Scan the code for more tutorials ➡**
**https://gamesir.com/pages/support**

### PACKAGE CONTENTS

Controller *1 · Charging Station *1 · Receiver *1 · D-pad *2 · Cable Retainer *1 · 3m Type-C Cable*1 · Xbox Game Pass Ultimate Card (1 month) *1 · GameSir Sticker*1 · Thank You & After-sale Service Card *1 · Manual *1

### REQUIREMENT

*Xbox Series X|S / Xbox One / Android 8.0 or above / PC (Win 10 or above) with USB port

### DEVICE LAYOUT

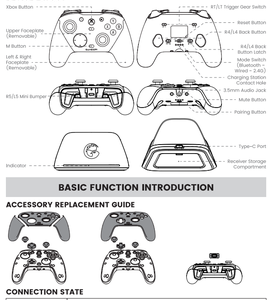


## BASIC FUNCTION INTRODUCTION

### ACCESSORY REPLACEMENT GUIDE

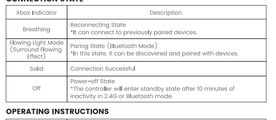

### CONNECTION STATE

| Xbox Indicator | Description |
|---|---|
| Breathing | Reconnecting State<br>*It can connect to previously paired devices. |
| Flowing Light Mode (Surround Flowing Effect) | Pairing State (Bluetooth Mode)<br>*In this state, it can be discovered and paired with devices. |
| Solid | Connection Successful |
| Off | Power-off State<br>*The controller will enter standby state after 10 minutes of inactivity in 2.4G or Bluetooth mode. |

### OPERATING INSTRUCTIONS

| Description | Operation |
|---|---|
| Power On/Off | Short press the Xbox button to power on. While powered on, press and hold the Xbox button for 5 seconds to power off. |
| Pairing | In Bluetooth mode, press and hold the pairing button for 2 seconds to enter forced pairing mode. |
| Preset Configuration Switching | M+Y Configuration 1 M+B Configuration 2<br>M+A Configuration 3 M+X Configuration 4 |
| Hair Trigger Mode | Enable/disable hair trigger mode.<br>Press and hold the M button + LT/RT button for 2 seconds. |
| Low Battery | When the battery is below 15%, the Xbox indicator will flash red. |
| Charging | You can charge the controller via the Type-C port or the charging station. |

## WINDOWS CONNECTION TUTORIAL

**WIRED CONNECTION**
1. Use the included Type-C cable to connect the controller to your computer, then press the Xbox button briefly to power on.
2. Once connected successfully, the Xbox indicator will remain solid.

**RECEIVER CONNECTION**
1. Insert the receiver into the computer.
2. Toggle the controller's mode switch to the 2.4G mode, and press the Xbox button briefly to power on. Wait for the controller to connect.
3. Once connected successfully, the Xbox indicator will remain solid.

## ANDROID CONNECTION TUTORIAL

**BLUETOOTH CONNECTION**
1. Toggle the controller's mode switch to the Bluetooth mode, and press the Xbox button briefly to power on.
2. Open the Bluetooth list on your phone, find the device named GameSir-G7 Pro, and click to connect.
3. Once connected successfully, the Xbox indicator will remain solid.
* If the connection is unsuccessful, press and hold the pairing button on the controller to re-enter pairing status.

## XBOX CONNECTION TUTORIAL

**WIRED CONNECTION**
1. Use the included Type-C cable to connect the controller to the Xbox console, then press the Xbox button briefly to power on.
2. Once connected successfully, the Xbox indicator will remain solid.

**RECEIVER CONNECTION**
1. Insert the receiver into the Xbox console.
2. Toggle the controller's mode switch to the 2.4G mode, and press the Xbox button briefly to power on. Wait for the controller to connect.
3. Once connected successfully, the Xbox indicator will remain solid.

## VOLUME ADJUSTMENT

1. Hold the M button + the D-pad up/down to increase/decrease the main volume (11 levels in total).
**A sound cue will be provided when adjusting to the maximum or minimum level.**
**Requires headset connection.**

2. Hold the M button + the D-pad left/right to increase game volume (while decreasing voice volume) / decrease game volume (while increasing voice volume).
**A sound cue will be provided when adjusting to the maximum, medium or minimum level.**
**Only works on Xbox consoles.**

3. Mute Function: Press the mute button to enable the mute function; the mute indicator will turn solid red. Press the mute button again to disable the mute function (default state); the mute indicator will turn off. While the mute function is active, holding the mute button will temporarily disable it. Release the button to restore the mute function.

## EXTRA BUTTON SETTING

Set the extra button value: Press and hold the M button + L4/R4/L5/R5 button, and the Xbox indicator will start flashing slowly. Press the button you want to map to the extra button, and the Xbox indicator will return to a solid light, indicating that the extra button setting is complete.
* Within this setting mode, pressing the corresponding extra button will clear its button value.

## STICKS & TRIGGERS CALIBRATION

1. Set the trigger to analog mode, then press and hold + until the Xbox indicator starts flashing slowly.
2. Ensure that the L7 & R7 triggers and the left & right sticks are not being touched. Then Press the A button. The Xbox indicator will turn off.
3. Press the LT & RT triggers to their maximum travel for 3 times. Rotate the left & right sticks to their maximum angle for 3 times. Press the A button. A solid light on the Xbox indicator indicates that the calibration is complete.

## CONTROLLER RESET

If the controller encounters issues such as being unable to power on or off properly, you can use a small object similar to the size of a paperclip to press the Reset button inside the circular hole on the back of the controller. This will force the controller to power off.

## CUSTOMIZATION VIA "GAMESIR NEXUS" SOFTWARE

Download the "GameSir Nexus" software from the Microsoft Store on Xbox/PC or from gamesir.com.

## ⚠ PLEASE READ THIS PRECAUTIONS CAREFULLY

- CONTAINS SMALL PARTS. Keep out of reach of children under the age of 3. Seek immediate medical attention if swallowed or inhaled.
- DO NOT use the product near fire.
- DO NOT expose to direct sunlight or high temperatures.
- DO NOT keep the product in a humid or dusty environment.
- DO NOT impact the product or cause it to fall due to strong impact.
- DO NOT use damaged parts, please avoid unnecessary malfunctions.
- DO NOT charge during wet or rainy parts.
- Use a soft, dry cloth to clean the product.
- DO NOT use chemicals such as alcohol or thinner.
- DO NOT disassemble, repair or modify.
- DO NOT use for purposes other than its original purpose. We are NOT responsible for accidents or damage when used for non-original purposes.
- DO NOT use directly at the quality limit, it might damage your eyes.
- If you have any quality concerns or suggestions, please contact GameSir or your local distributor.

### WASTE ELECTRICAL & ELECTRICAL EQUIPMENT INFORMATION

**CORRECT DISPOSAL OF THIS PRODUCT (WASTE ELECTRICAL & ELECTRICAL EQUIPMENT)**
Applicable in the European Union and other European countries with separate collection systems.

This mark on the product or accompanying documents means that it should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product to designated collection points where it will be accepted on an individual basis. Alternatively, in some countries you may return your products to your local retailer upon purchase of an equivalent new product. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further information. If you do so, you will ensure that your disposed product undergoes the necessary treatment, recovery and recycling, thereby preventing negative potential effects on the environment and human health.

### DECLARATION OF CONFORMITY

**FC FCC WARNING**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
— Reorient or relocate the receiving antenna.
— Increase the separation between the equipment and receiver.
— Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
— Consult the dealer or an experienced radio/TV technician for help.
RF warning for Portable device:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

**IC CAUTION**
This device contains licence-exempt transmitter(s)/receiver(s) that comply with innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:
1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

**CE STATEMENT OF COMPLIANCE WITH EU DIRECTIVE**
Hereby, Guangzhou Chicken Run Network Technology Co., Ltd, declares that this GameSir G7 Pro Controller is in compliance with Directive 2014/30/EU, 2014/53/EU & 2011/65/EU and its amendment (EU) 2015/863.

The power provided by the charger is between the minimum 1W required by the radio device and the maximum 5W to achieve the maximum charging speed.

### WARNINGS AND SAFETY INFORMATION

All information regarding the use of the products can be found in the attached user manual.
Before using the product, please read the manual carefully and follow the manufacturer's recommendations.
Also, observe the following safety information and warnings before use:

**USAGE WARNINGS**
**RISK OF DEVICE DAMAGE:**
- Controllers should be used exclusively for their intended purpose—video games. Do not use the device for any other purpose not recommended by the manufacturer.
- If the device comes into contact with liquid, immediately disconnect it and dry it according to the manufacturer's instructions.
- Avoid applying excessive force when pressing buttons or operating the controller to prevent damage to the mechanisms.

**RISK TO THE USER:**
- During extended use, take regular breaks to avoid fatigue in your hands, wrists, and shoulders.
- Ensure the controller is placed securely to prevent it from slipping or tipping over during use.
- Controllers with force feedback systems may generate sudden movements—always hold them with both hands while playing.

**POWER AND CONNECTION RISKS:**
- Do not use damaged power cables or USB cables. Always use the original accessories provided by the manufacturer.
- Ensure that USB ports and power sockets are clean and free of debris to ensure a proper connection.
- For wireless devices, regularly charge the batteries or replace them with new ones to ensure continuous operation.

**PROPER USAGE INFORMATION**
**PREPARATION AND SETUP:**
- Before first use, install any software or drivers provided by the manufacturer if required.
- Place the controller on a stable surface, such as a desk, to ensure comfort and precision during use.
- Make sure all cables are properly connected and secured to prevent accidental disconnections.

**SAFE USAGE:**
- Adjust the device settings in games (e.g., sensitivity, vibrations) according to your preferences to ensure comfortable and safe gameplay. Avoid excessive settings.
- Regularly check the condition of buttons, joysticks, and other components to ensure they are functioning properly.
- For controllers with force feedback, ensure the feedback settings are not too strong.

**ADDITIONAL PRECAUTIONS:**
- Cleaning and Maintenance: Regularly remove dust from the controller using a dry, soft cloth. Avoid using harsh chemicals that may damage the surface of the device.
- Storage: After use, disconnect the controller from the console or PC and store it in a dry, dust-free place.
- Cable Management: For wired controllers, ensure cables are organized to prevent tangling or damage.

**COMPLIANCE DECLARATION**
The device is designed in accordance with the safety requirements outlined in Regulation (EU) 2023/988. They meet the requirements for electromagnetic compatibility (EMC), durability, and user safety.
This manual is a translation of the original user manual created by the manufacturer.
Detailed information regarding the distributor/manufacturer warranty conditions is available on the website: www.gamesir.com.
The device must be regularly maintained (cleaned) by the user or through specialized service points at the user's cost and responsibility. If the user manual does not provide information about necessary periodic or service maintenance actions, the physical condition of the product should be assessed regularly (at least once a week) to detect any deviation from the condition of a new product. If any deviation is detected or identified, immediate maintenance (cleaning) or servicing actions should be taken. Failure to perform proper maintenance (cleaning) and respond to identified issues may result in permanent damage to the product. The warranty provider is not responsible for damages resulting from neglect.
Importer: GameSir Nexus
Address: 5th RADOVANU, No. 7, Bloc 42, Scara 1, Etaj 5, Apartment 29, 231852Bucuresti Sectorul 2, Romania
Producer: Guangzhou Chicken Run Network Technology Co., Ltd.
Address: Room 1008,1003, No. 19, Yard 2, Yunnan West Street, Yuanhe District, Guangzhou, China
GameSir and the GameSir logo are registered trademarks of Guangzhou Chicken Run Network Technology Co., Ltd. All other trademarks are the property of their respective owners.

### LI-ION BATTERY

The device is equipped with a Li-ION (lithium-ion) battery, which, due to its physical and chemical structure, ages over time and with usage. The manufacturer specifies the maximum operating time of the device under laboratory conditions (new battery, fully charged). Actual usage time may differ from the declared value and this is not considered a defect of the device. To maintain the maximum lifespan of the battery, it is not recommended to recharge it below 3.5V or 5% of its total capacity. Lower values, such as 3.2V for the cell, permanently damage the battery and are not covered by the warranty. If the battery in the controller device is not used for more than one month, the battery should be charged to 50%, and the charge level should be checked regularly every two months. Store the battery and device in a dry place, away from direct sunlight and negative temperatures.

### LI-PO BATTERY

The device is equipped with a Li-PO (lithium-polymer) battery, which, due to its physical and chemical structure, ages over time and with usage. The manufacturer specifies the maximum operating time of the device under laboratory conditions (new battery, fully charged). Actual usage time may differ from the declared value and this is not considered a defect of the device. To maintain the maximum lifespan of the battery, it is not recommended to recharge it below 3.5V or 5% of its total capacity. Lower values, such as 3.2V for the cell, permanently damage the battery and are not covered by the warranty. If the battery in the controller device is not used for more than one month, the battery should be charged to 50%, and the charge level should be checked regularly every two months. Store the battery and device in a dry place, away from direct sunlight and negative temperatures.

繁體中文

# G7 PRO WIRELESS

Wireless Controller for Xbox, PC & Mobile

**型號: GameSir-G7 Pro**
**掃描獲取更多教程 ➡**
**https://gamesir.com/pages/support**

### 包裝內容

手柄*1 · 充電底座*1 · 接收器*1 · 十字键*2 · 3m Type-C 線*1 · Xbox Game Pass 體驗卡 (1個月) · GameSir貼紙*1 · 售後感謝卡*1 · 說明書*1

### 要求

*Xbox Series X|S / Xbox One / Android 8.0 或更高版本 / 帶USB介面的電腦 (Win 10或更高版本)

### 設備佈局

## 基礎功能介紹

### 配件更換指南

### 手柄連接狀態

| Xbox指示燈 | 說明 |
|---|---|
| 呼吸 | 回連狀態<br>*可與已經配對的設備進行連接。 |
| 流光模式 (環繞流光) | 配對狀態(藍牙模式)<br>*進入該狀態後可被設備搜索配對。 |
| 常亮 | 連接成功 |
| 熄滅 | 關機狀態<br>*手柄2.4G或藍牙模位下10分鐘未操作進入待機狀態。 |

### 操作說明

| 描述 | 操作 |
|---|---|
| 開關機 | 短按Xbox鍵開機,開機狀態下長按5秒Xbox鍵關機。 |
| 配對 | 藍牙模式下可通過長按2秒配對鍵進入強制配對狀態。 |
| 預設配置切換 | M+Y 配置1 M+B 配置2<br>M+A 配置3 M+X 配置4 |
| 快速扳機 | 開啟/關閉快速扳機模式<br>長按2秒 M + LT/RT |
| 低電 | 手柄電量低於15%時,Xbox指示燈红色閃爍提示。 |
| 充電 | 可通過手柄Type-C介面或充電底座對手柄進行充電。 |

## Windows連接教程

**有線連接**
1. 使用附贈的Type-C數據線連接手柄和電腦, 短按Xbox鍵開機。
2. 連接成功後, Xbox指示燈常亮。

**接收器連接**
1. 將接收器插入電腦中。
2. 將手柄模式切換到2.4G, 短按Xbox鍵開機, 等待連接。
3. 連接成功後, Xbox指示燈常亮。

## Android連接教程

**藍牙連接**
1. 將手柄模式切換到藍牙, 短按Xbox鍵開機。
2. 打開手機藍牙列表, 選擇設備 GameSir-G7 Pro, 點擊連接。
3. 連接成功後, Xbox指示燈常亮。
*如果未連接成功, 需要長按手柄的配對鍵重新進入配對狀態

## Xbox連接教程

**有線連接**
1. 使用附贈的Type-C數據線連接手柄和Xbox主機, 短按Xbox鍵開機。
2. 連接成功後, Xbox指示燈常亮。

**接收器連接**
1. 將接收器插入Xbox主機中。
2. 將手柄模式切換到2.4G, 短按Xbox鍵開機, 等待連接。
3. 連接成功後, Xbox指示燈常亮。

## 聲音調節

1. 按住M鍵 + 方向鍵上/下, 可增大主音量/減小主音量。(共11檔)
**調節到最大/最小檔位時, 會有提示音。**
**需要連接耳機後使用。**



2. 按住M鍵 + 方向鍵左/右, 可增大遊戲音量 (同步減小人聲音量) /減小遊戲音量 (同步增大人聲音量)。
**1個聲音最大/中間/最小檔位時, 會有提示音。**
**僅在Xbox主機上生效**



3. 開麥功能: 單擊開麥鍵, 開麥燈红燈常亮, 開麥功能開啟, 再次單擊開麥鍵, 開麥燈熄滅, 開麥功能關閉(默認), 在開麥功能開啟的狀態下, 長按開麥鍵可暫時關閉開麥功能, 鬆開開麥鍵後恢復開麥功能開啟狀態。




## 拓展鍵設置



設定拓展鍵键值: 同時按住M键+L4/R4/L5/R5键, Xbox指示燈進入慢閃, 单擊需映射到拓展键上的按键, Xbox指示燈恢復常亮, 拓展键設定完成。
*進入設定模式後, 若直接單擊對應拓展键, 則清空該拓展键键值。

## 搖杆、扳機的校準

1. 將按鍵切換至模拟檔, 長按 + , 直至Xbox指示燈慢閃。
2. 確保不觸碰L7、RT键和左右搖杆狀態下, 按下A鍵, 此時指示燈熄滅。
3. 按壓LT和RT至最大行程3次, 最大角度旋轉左右搖杆各3圈後, 按下A鍵, 指示燈由慢閃變為常亮後, 校準完成。

## 手柄Reset

當遇到手柄使用異常卡住, 如無法正常開關機的情況, 可用牙籤或針卡針尺寸的物件, 按下手柄背部圆孔裏的Reset重置手柄初始狀態。

## 通過GameSir Nexus軟體自定義配置

前往Xbox、電腦版的Microsoft Store,或gamesir.com網址下載"GameSir Nexus"軟體。

## ⚠ 使用前請務必閱讀本注意事項

- 內含細小零件, 請務必放在3歲以下兒童觸及不到的地方, 若不慎吞食或吸入, 請立即就醫。
- 請勿靠近火源使用產品。
- 請勿將產品暴露於陽光直射或高溫的環境中。
- 請勿將產品置於潮濕或多塵的環境中。
- 請勿撞擊產品或使其跌落。
- 請勿使用有損壞的部件,以防可能會導致故障。
- 請勿在潮湿的環境中充電。
- 請使用柔軟的幹布清洁。
- 請勿使用汽油或稀釋劑等化學品。
- 請勿自行拆卸、修理、或改裝。
- 請勿將產品用於除本說明書以外的用途以外的用途。對因非原本用途而造成的事故或損害,我們概不負責。
- 請勿直視光束, 它可能會傷害您的眼睛。
- 如果您有任何有關產品品質的問題或建議, 請聯繫GameSir或您當地的經銷商。

### 產品型號:GameSir-G7 Pro

「取得審驗證明之信功率射頻機材, 非經核准, 公司、商號或使用者均不得自動變更頻率, 加大功率或變更原設計之特性及功能。低功率射頻機材之使用不得影響飛航安全及干擾合法通信;經發現有干擾現象時, 應立即停用, 並改善至無干擾時方得繼續使用。前述合法通信, 指依電信管理法規定作業之無線電通信。低功率射頻機材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。」

## 產品聲明

### 廢電子電氣設備信息(適用於歐盟及其他有單獨回收系統的國家)

此標誌表示該產品及其電子配件(如充電器、耳機或USB線)不應與一般家庭垃圾一起處理。為確保正確處理、回收和回收利用,請將此產品送到指定的收集點,在那裡它將被免費接受。或者,在某些國家,您可以在購買新的同類產品時將其退回給當地零售商。通過正確處置此產品,您將確保其經過必要的處理、回收和回收利用,從而防止對環境和人類健康造成潛在的負面影響,否則可能會因不當的廢物處理而產生這些影響。有關更多信息,請聯繫您當地的主管當局。

### 符合聲明

Hereby, Guangzhou Chicken Run Network Technology Co., Ltd, 聲明, 此 GameSir G7 Pro Controller 符合指令 2014/30/EU, 2014/53/EU 和 2011/65/EU 以及其修正案 (EU) 2015/863 的要求。

### 警告和安全信息

有關產品使用的所有信息都可以在隨附的用户手册中找到。
在使用本产品之前,请仔细阅读手册并遵守制造商的建议。
使用前,还要注意以下安全信息和警告:

**使用警告**
**设备损坏风险:**
- 控制器只能用于其预期用途——视频游戏。不要将设备用于制造商未推荐的任何其他用途。
- 如果设备与液体接触,立即断开连接并根据制造商的说明将其干燥。
- 避免在按下按钮或操作控制器时施加过大的力,以防损坏机械装置。

**对用户的风险:**
- 长时间使用时,要定期休息,以避免手、手腕和肩部疲劳。
- 确保控制器放置稳固,防止在使用过程中滑落或翻倒。
- 带有力反馈系统的控制器可能会产生突然的动作——玩游戏时务必双手握持。

**电源和连接风险:**
- 不要使用损坏的电源线或USB线。始终使用制造商提供的原装配件。
- 确保USB端口和电源插座清洁且无异物,以确保连接良好。
- 对于无线设备,定期为电池充电或更换新电池,以确保持续运行。

**正确使用信息**
**准备和设置:**
- 首次使用前,如有必要,安装制造商提供的任何软件或驱动程序。
- 将控制器放置在稳定的表面上,例如桌子,以确保使用时的舒适性和精确性。
- 确保所有电缆均已正确连接并固定,以防意外断开。

**安全使用:**
- 根据个人喜好调整游戏中的设备设置(例如灵敏度、振动),以获得舒适安全的游戏体验。避免过度设置。
- 定期检查按钮、摇杆和其他组件的状况,确保其正常运行。
- 对于具有力反馈功能的控制器,请确保反馈设置不会过强。

**其他预防措施:**
- 清洁和维护:定期使用干燥、柔软的布料清除控制器上的灰尘。避免使用可能损坏设备表面的刺激性化学品。
- 存放:使用后,将控制器从主机或电脑上断开连接,并将其存放在干燥、无尘的地方。
- 线缆管理:对于有线控制器,确保线缆整齐有序,以防缠结或损坏。

**合规声明**
该设备的设计符合法规(EU) 2023/988中规定的安全要求。它们符合电磁兼容性(EMC)、耐用性和用户安全的要求。
本手册是制造商原始用户手册的翻译版本。
有关分销商/制造商保修条款的详细信息,请访问网站:www.gamesir.com。
必须由用户定期维护(清洁)设备,费用和责任由用户承担。如果用户手册未提供有关必要的定期或维修保养的信息,则应每周至少检查一次产品的物理状况,以检测与新产品状况的任何偏差。如果检测到或发现任何偏差,应立即采取维护(清洁)或维修措施。未能正确维护(清洁)和响应已发现的问题可能会对产品造成永久性损坏。保修服务提供商不对因疏忽造成的损坏负责。
进口商:GameSir Nexus
地址:5th RADOVANU, No. 7, Bloc 42, Scara 1, Etaj 5, Apartment 29, 231852Bucuresti Sectorul 2, Romania
制造商:广州鸡行网络科技有限公司
地址:中国广州市越秀区云南西街19号2号院1008、1003房
GameSir和GameSir徽标是广州鸡行网络科技有限公司的注册商标。所有其他商标均为其各自所有者的财产。

### 锂离子电池

该设备配有一个锂离子(Li-ION)电池,由于其物理和化学结构,该电池会随着时间和使用而老化。制造商规定了设备在实验室条件下(新电池,充满电)的最长运行时间。实际使用时间可能与声明值不同,这不被视为设备缺陷。为了保持电池的最长使用寿命,建议不要在电量低于3.5V或总容量的5%时对电池进行充电。较低的值,例如电芯的3.2V,会永久损坏电池,且不在保修范围内。如果控制器中的电池在超过一个月的时间内未使用,则应将电池充电至50%,并且应每两个月定期检查一次电量水平。将电池和设备存放在干燥的地方,远离阳光直射和负温度。

### 锂聚合物电池

该设备配有一个锂聚合物(Li-PO)电池,由于其物理和化学结构,该电池会随着时间和使用而老化。制造商规定了设备在实验室条件下(新电池,充满电)的最长运行时间。实际使用时间可能与声明值不同,这不被视为设备缺陷。为了保持电池的最长使用寿命,建议不要在电量低于3.5V或总容量的5%时对电池进行充电。较低的值,例如电芯的3.2V,会永久损坏电池,且不在保修范围内。如果控制器中的电池在超过一个月的时间内未使用,则应将电池充电至50%,并且应每两个月定期检查一次电量水平。将电池和设备存放在干燥的地方,远离阳光直射和负温度。

DEUTSCH

# G7 PRO WIRELESS

Wireless Controller for Xbox, PC & Mobile

**Modellname: GameSir-G7 Pro**
**Code für weitere Anleitungen scannen ➡**
**https://gamesir.com/pages/support**

### PAKETINHALT

Controller *1 · Ladestation *1 · Empfänger *1 · D-Steuerkreuz *2 · Kabelhalterung *1 · 3m USB-C-Kabel 3 m *1 · „Xbox Game Pass Ultimate"-Karte (1 Monat) *1 · GameSir-Sticker *1 · Danke- und Kundendienstkarte *1 · Handbuch *1

### ANFORDERUNGEN

*Xbox Series X|S / Xbox One / Android 8.0 oder höher / PC (Win 10 oder höher) mit USB-Anschluss

### GERÄTELAYOUT

## EINFÜHRUNG IN BASISFUNKTIONEN

### LEITFADEN ZUM AUSTAUSCHEN DER ACCESSOIRES

### VERBINDUNGSSTATUS

| Xbox-LED-Anzeige | Beschreibung |
|---|---|
| Pulsiert | Wiederverbindungsmodus<br>* Zur Herstellung der Verbindung zu zuvor gekoppelten Geräten. |
| Fließschrittmodus (Umgebender Fließeffekt) | Kopplungsmodus (Bluetooth-Modus)<br>* Zum Erkennen und Verbinden von Geräten. |
| Leuchtet durchgehend | Verbunden |
| Aus | Ausgeschalteter Zustand<br>* Der Controller wechselt nach 10 Minuten Inaktivität im 2,4G-oder Bluetooth-Modus in den Standby-Modus. |

### BEDIENANWEISUNG

| Beschreibung | Bedienung |
|---|---|
| Ein-/Ausschalten | Drücken Sie die Xbox-Taste kurz, um das Gerät einzuschalten. Im eingeschalteten Zustand halten Sie die Xbox-Taste 5 Sekunden lang gedrückt, um es auszuschalten. |
| Koppeln | Halte im Bluetooth-Modus die Kopplungstaste 2 Sekunden lang gedrückt, um den Kopplungsmodus zu aktivieren. |
| Konfigurations-voreinstellung | M+Y Konfiguration 1 M+B Konfiguration 2<br>M+A Konfiguration 3 M+X Konfiguration 4 |
| Haarriggen-Modus | Aktiviert/deaktiviert den Haarrigger-Modus.<br>Halte die M-Taste und die LT+/RT+Taste 2 Sekunden lang gedrückt. |
| Niedriger Akkustand | Wenn der Akku weniger als 15 % Restkleistung aufweist, blinkt die Xbox-LED-Anzeige rot. |
| Aufladen | Du kannst den Controller über den USB-C-Anschluss oder die Ladestation aufladen. |

## WINDOWS-VERBINDUNGSANLEITUNG

**KABELGEBUNDENE VERBINDUNG**
1.Verwende das enthaltene USB-C-Kabel, um den Controller mit deinem Computer zu verbinden, und drücke dann kurz auf die Home-Taste, um den Controller einzuschalten.
2.Nach erfolgreicher Verbindung leuchtet die Xbox-LED-Anzeige durchgehend.

**EMPFÄNGERVERBINDUNG**
1.Verbinde den Empfänger mit deinem Computer.
2.Schiebe die Modusschaltertaste des Controllers in die 2,4+Modus-Position und drücke kurz auf die Xbox-Taste, um den Controller einzuschalten. Warte, bis die Verbindung erfolgreich hergestellt wurde.
3.Nach erfolgreicher Verbindung leuchtet die Xbox-LED-Anzeige durchgehend.

## ANDROID-VERBINDUNGSANLEITUNG

**BLUETOOTH-VERBINDUNG**
1.Schiebe die Modusschaltertaste des Controllers in die Bluetooth+Position und drücke kurz auf die Xbox-Taste, um den Controller einzuschalten.
2.Öffne die Liste mit den Bluetooth-Geräten auf deinem Mobilgerät, suche nach dem Gerät "GameSir-G7 Pro" und tippe darauf, um eine Verbindung herzustellen.
3.Nach erfolgreicher Verbindung leuchtet die Xbox-LED-Anzeige durchgehend.
* Wurde die Verbindung nicht hergestellt, halte die Kopplungstaste am Controller gedrückt, um den Kopplungsmodus erneut zu aktivieren.

## XBOX-VERBINDUNGSANLEITUNG

**KABELGEBUNDENE VERBINDUNG**
1.Verwende das enthaltene USB-C-Kabel, um den Controller mit deiner Xbox-Konsole zu verbinden, und drücke dann kurz auf die Home-Taste, um den Controller einzuschalten.
2.Nach erfolgreicher Verbindung leuchtet die Xbox-LED-Anzeige durchgehend.

**EMPFÄNGERVERBINDUNG**
1.Verbinde den Empfänger mit deiner Xbox-Konsole.
2.Schiebe die Modusschaltertaste des Controllers in die 2,4+Modus-Position und drücke kurz auf die Xbox-Taste, um den Controller einzuschalten. Warte, bis die Verbindung erfolgreich hergestellt wurde.
3.Nach erfolgreicher Verbindung leuchtet die Xbox-LED-Anzeige durchgehend.

## LAUTSTÄRKENANPASSUNG

1. Halte die M-Taste gedrückt und drücke auf dem Steuerkreuz nach oben/unten, um die Gesamtlautstärke zu erhöhen/verringern (insgesamt 11 Stufen).
**Ein Toneffekt wird abgespielt, wenn du die höchste/mittlere/niedrigste Stufe erreichst.**
**Erfordert eine Headset-Verbindung.**



2. Halte die M-Taste gedrückt und drücke auf dem Steuerkreuz nach links oder rechts, um die Spiellautstärke zu erhöhen und die Sprachlautstärke zu reduzieren bzw. die Spiellautstärke zu reduzieren und die Sprachlautstärke zu erhöhen.
**Ein Tonefekt wird abgespielt, wenn du die höchste/mittlere/niedrigste Stufe erreichst.**
**Funktioniert nur auf Xbox-Konsolen.**



3.Stummschaltfunktion: Drücke die Stummschaltfunktion-Taste, um die Stummschaltfunktion zu aktivieren. Die Stummschalten-LED-Anzeige leuchtet durchgehend rot. Drücke erneut auf die Stummschalten-Taste, um die Stummschaltfunktion wieder auszuschalten (Standard-Status). Die Stummschalten-LED-Anzeige leuchtet daraufhin nicht mehr. Du kannst die Stummschaltfunktion, sofern sie aktiv ist, durch Gedrückthalten der Stummschalten-Taste kurzzeitig deaktivieren. Wenn du die Taste wieder loslässt, wird die Stummschaltfunktion wieder aktiviert.




## EXTRA-TASTEN-PROGRAMMIERUNG



Halte die M-Taste sowie L4/R4/L5/R5 gedrückt, um Extra-Tasten zu programmieren. Die Xbox-LED-Anzeige blinkt daraufhin langsam. Drücke die Taste, die du einer Extra-Taste zuweisen möchtest. Die Xbox-LED-Anzeige leuchtet daraufhin wieder durchgehend, was angibt, dass die Programmierung der Extra-Taste erfolgreich war.
* Drücke während der Programmierung einer Extra-Taste erneut auf die entsprechende Extra-Taste, um die Programmierung für diese Taste zu löschen.

## STICK- UND TRIGGER-KALIBRIERUNG

1.Stellen Sie den Trigger auf den linearen Modus, und halten Sie dann + gedrückt, bis die Xbox-Anzeige langsam blinkt.
2.Achten Sie darauf, dass weder die Tasten L7 und RT oder die linken oder rechten Stick. Drücken dann die A-Taste. Die Xbox-LED+Anzeige schaltet sich aus.
3.Drücke LT und RT 3-mal vollständig durch. Drehe die Sticks 3-mal um ihren maximalen Winkel. Drücke dann erneut die A-Taste. Die Xbox-LED+Anzeige leuchtet durchgehend und die Kalibrierung ist damit abgeschlossen.

## CONTROLLER ZURÜCKSETZEN

Wenn der Controller mit dem Controller fast, z. B., wenn er sich nicht mehr ordnungsgemäß ein- oder ausschalten lässt, kannst du einen kleinen Gegenstand, z. B. eine Büroklammer, in das Loch auf der Rückseite des Controllers drücken, um die Reset-Taste zu betätigen. Dadurch wird der Controller ausgeschaltet und zurückgesetzt.

## PERSONALISIERUNG ÜBER DIE „GAMESIR NEXUS"-SOFTWARE

Lade die „GameSir Nexus"-Software im Microsoft Store auf Xbox/PC oder über die Website gamesir.com herunter.

## ⚠ BITTE LES DIR DIE SICHERHEITSHINWEISE AUFMERKSAM DURCH

- ENTHÄLT KLEINTEILE. Von Kindern unter 3 Jahren fernhalten. Bei Verschlucken oder Einatmen sofort medizinische Hilfe aufsuchen.
- NICHT in der Nähe von Feuer benutzen.
- NICHT direktem Sonnenlicht oder hohen Temperaturen aussetzen.
- NICHT in feuchten oder staubigen Umgebungen aufbewahren.
- NICHT stoßen oder fallen lassen.
- USB-Anschluss NICHT mit Fingern anfassen. Dies könnte zu fehlfunktionen führen.
- Kabelteile NICHT gewaltsam verbiegen oder daran ziehen.
- Für die Reinigung ein weiches, trockenes Tuch verwenden.
- KEINE Chemikalien wie Benzin oder Verdünner verwenden.
- NICHT auseinandernehmen, reparieren oder modifizieren.
- NUR für den ursprünglich gedachten Zweck verwenden. Wir können NICHT für Unfälle, Verletzungen oder Schäden haftbar gemacht werden, wenn das Produkt für einen nicht gedachte Zw

GAMESIR

한국어

# G7 PRO WIRELESS

Wireless Controller for Xbox, PC & Mobile

모델 번호: GameSir-G7 Pro
크로퍼 스캐하여 추가 사용 방법을 확인하십시오 ➡
https://gamesir.com/pages/support

## 제품 구성

컨트롤러 *1 충전 케이블 *1 리사이 *1 D-상자 버튼 *2 케이블 고정대 *1
C 타입 케이블 *1 Xbox Game Pass Ultimate 카드(1개월) *1 GameSir 스티커*1
감사 &A/S 카드 *1 제품 사용 설명서*1

## 요구 사항

*Xbox Series X|S / Xbox One / Android 8.0 이상 / USB 포트가 있는 PC (Win 10 이상)

## 장치 레이아웃

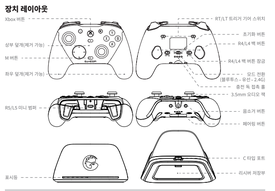


## 기본 기능 소개

### 액세서리 교체 가이드

### 연결 상태

| Xbox 표시등 | 설명 |
|---|---|
| 꺼짐 | 제전원 상태<br>*전전에 해어링한 기기와 연결할 수 있습니다. |
| 천천히 깜빡임<br>(4초마다 한 줄 표시) | 해어링 상태(블루투스 모드)<br>*전전에 해어링한 기기와 연결할 수 있습니다. |
| 점등 | 연결 성공 |
| 켜짐 | 전원 켜짐 상태<br>*전트롤러는 2.4G 또는 블루투스 모드에서 10분 동안 조작이 없으면 대기 모드로 전환됩니다. |

### 작동 설명

| 설명 | 작동 |
|---|---|
| 전원 켜기/끄기 | Xbox 버튼을 짧게 눌러 전원을 켭니다. 전원이 켜진 상태에서 Xbox 버튼을 5초 동안 길게 눌러 전원을 끕니다. |
| 페어링 | 블루투스 모드에서 페어링 버튼을 2초간 누른 후에 페어링 모드에 진입합니다. |
| 프라브 설정 전환 | 2초 |
| 진동 | 페어링 상태(블루투스 모드)<br>M 버튼 + LT/RT 버튼을 2초간 길게 누릅니다. |
| 페어 트리거 모드 | 페어 트리거 모드 활성화/비활성화<br>M 버튼 + LT/RT 버튼을 2초간 길게 누릅니다. |
| 배터리 부족 | 배터리가 15% 이하로 떨어지면 Xbox 표시등이 깜빡이며 알려줍니다. |
| 충전 중 | C 타입 포트 또는 충전 독으로 컨트롤러를 충전할 수 있습니다. |

## Windows 연결 방법

### 유선 연결

1.동봉된 C 타입 케이블로 컨트롤러를 컴퓨터에 연결하고 Home 버튼을 짧게 눌러 전원을 켭니다.
2.컨트롤러와 Xbox 표시등이 켜집니다.

### 리사이 연결

1.컴퓨터에 리사이를 연결합니다.
2.컨트롤러와 Xbox 스위치를 2.4G 모드로 전환한 후 Xbox 버튼을 짧게 눌러 전원을 켭니다. 컨트롤러가 연결을 해제하기 기다립니다.
3.컨트롤러와 Xbox 표시등이 켜집니다.

## Android 연결 설명

### 블루투스 연결

1.컨트롤러의 모드 스위치를 블루투스 모드로 전환한 후 Xbox 버튼을 짧게 눌러 전원을 켭니다.
2.스마트폰의 블루투스 목록에서 GameSir-G7 Pro 기기를 찾아 연결을 클릭합니다.
3.연결되면 Xbox 표시등이 켜집니다.
*연결되지 않으면 컨트롤러와 페어링 버튼을 길게 눌러 페어링 상태로 재진입합니다.

## Xbox 연결 방법

### 유선 연결

1.동봉된 C 타입 케이블로 컨트롤러를 Xbox 콘솔에 연결하고 Home 버튼을 짧게 눌러 전원을 켭니다.
2.컨트롤러와 Xbox 표시등이 켜집니다.

### 리사이 연결

1.리사이를 Xbox 콘솔에 연결합니다.
2.컨트롤러의 모드 스위치를 2.4G 모드로 전환한 후 Xbox 버튼을 짧게 눌러 전원을 켭니다. 컨트롤러가 연결을 해제하기 기다립니다.
3.연결되면 Xbox 표시등이 켜집니다.

## 음량 조절

1.M 버튼을 누른 상태에서 십자 버튼 위/아래를 눌러 주 음량을 조절할 수 있습니다(총 31단계).
***참고, 최소 음량에도 일정한 출력음으로 알려줍니다.**
***헤드셋 연결이 필요합니다.**

2.M 버튼을 누른 상태에서 십자 버튼 왼쪽/오른쪽을 눌러 게임 음량을 올리거나(최대 음량은 내림) 게임 음량을 내립니다(최대 음량은 올림).
***참고, 최고, 최소 음량에 도달하면 도달하면 알려줍니다.**
*Xbox 콘솔에서만 작동합니다.

3.음소거 기능: 음소거 버튼으로 음소거 기능을 사용합니다. 음소거 표시등이 켜지면서 마이크 음소거 기능을 활성화합니다. 음소거 기능을 다시 끌려면 음소거 기능을 해제합니다. 마이크 음소거 기능을 누르고 있으면 음소거 기능이 잠시 해제됩니다. 버튼에서 손을 떼면 다시 음소거 기능을 사용합니다.

## 엑스트라 버튼 설정

엑스트라 버튼 설정 M 버튼 + L4/R4/L5/R5 버튼을 길게 누르면 Xbox 표시등이 천천히 깜빡입니다. 엑스트라 버튼에 매핑할 버튼을 누르면 Xbox 표시등이 점등되며, 엑스트라 버튼 설정이 완료됩니다.
* 설정 모드 중에 점등= 엑스트라 버튼을 누르면 해당 버튼에 설정 값을 매핑합니다.

## 스틱 및 트리거 조정

1.동시에 십자 모드로 설정한 후 ⓨ+Ⓐ+Ⓑ를 길게 눌러 Xbox 표시등이 천천히 깜박일 때까지 기다립니다.
2.LT, RT 트리거 완쪽, 오른쪽 스틱을 한 번씩 눌러 조정합니다. 그 후 M 버튼을 누르면 Xbox 표시등이 켜집니다.
3.LT, RT 트리거 끝까지 끝까지 3번 누릅니다. 완쪽, 오른쪽 스틱을 최대 각도로 3회 돌립니다. A 버튼을 누릅니다. Xbox 표시등이 점등되면 조정이 완료된 것입니다.

## 컨트롤러 초기화

컨트롤러를 장상적으로 켜거나 끌 수 없는 등 컨트롤러에 문제가 발생하면 끌립 전문 홈페로 컨트롤러 장치의 전원 구멍 안에 있는 초기화 버튼을 누른십시오. 컨트롤러 전원을 강제로 끌 수 있습니다.

## "GAMESIR NEXUS" 소프트웨어로 커스터마이징

Xbox/PC 및는 gamesir.com에 Microsoft Store에서 "GameSir Nexus" 소프트웨어를 다운로드합니다.

### ⚠ 다음 주의 사항을 주의 깊게 읽어주시기 바랍니다

- 적은 부품이 있습니다. 3세 이하 어린이 손에 닿지 않도 곳에 두십시오. 삼키거나 흡입할 때는 즉시 의사의 치료를 받으십시오.
- 제품을 고온에서 사용하지 마십시오.
- 직사광선이나 고열에 노출하지 마십시오.
- 제품을 습하거나 먼지가 많은 곳에 두지 마십시오.
- 제품에 충격을 가하지 말아주십시오. 떨어뜨리거나 밟지 마십시오.
- USB 포트를 직접 건드리면 고장이 발생할 수 있습니다.
- 제품을 부분을 강하게 구부리지 않기 바랍니다.
- 제품을 분해하거나 수리하지 마십시오. 보증이 무효화됩니다.
- 제품이 젖으면 즉시 전원을 끄고 건조하십시오.
- 물이나 습기 환경에서 충전을 사용하지 마십시오.
- 장시간 사용하지 않을 때는 충전을 해제하기 바랍니다.
- 너무 오래 충전하면 배터리 성능에 영향을 줄 수 있습니다.

## Windows 연결 방법

### 유선 연결

1.동봉된 C 타입 케이블로 컨트롤러를 컴퓨터에 연결하고 Home 버튼을 짧게 눌러 전원을 켭니다.
2.컨트롤러와 Xbox 표시등이 켜집니다.

### 리사이 연결

1.컴퓨터에 리사이를 연결합니다.
2.컨트롤러의 모드 스위치를 2.4G 모드로 전환한 후 Xbox 버튼을 짧게 눌러 전원을 켭니다. 컨트롤러가 연결을 해제하기 기다립니다.
3.연결되면 Xbox 표시등이 켜집니다.

## Android 연결 설명

### 블루투스 연결

1.컨트롤러의 모드 스위치를 블루투스 모드로 전환한 후 Xbox 버튼을 짧게 눌러 전원을 켭니다.
2.스마트폰의 블루투스 목록에서 GameSir-G7 Pro 기기를 찾아 연결을 클릭합니다.
3.연결되면 Xbox 표시등이 켜집니다.
*연결되지 않으면 컨트롤러와 페어링 버튼을 길게 눌러 페어링 상태로 재진입합니다.

## Xbox 연결 방법

### 유선 연결

1.동봉된 C 타입 케이블로 컨트롤러를 Xbox 콘솔에 연결하고 Home 버튼을 짧게 눌러 전원을 켭니다.
2.컨트롤러와 Xbox 표시등이 켜집니다.

### 리사이 연결

1.리사이를 Xbox 콘솔에 연결합니다.
2.컨트롤러의 모드 스위치를 2.4G 모드로 전환한 후 Xbox 버튼을 짧게 눌러 전원을 켭니다. 컨트롤러가 연결을 해제하기 기다립니다.
3.연결되면 Xbox 표시등이 켜집니다.

## 음량 조절

1.M 버튼을 누른 상태에서 십자 버튼 위/아래를 눌러 주 음량을 조절할 수 있습니다(총 31단계).
***참고, 최소 음량에도 일정한 출력음으로 알려줍니다.**
***헤드셋 연결이 필요합니다.**

2.M 버튼을 누른 상태에서 십자 버튼 왼쪽/오른쪽을 눌러 게임 음량을 올리거나(최대 음량은 내림) 게임 음량을 내립니다(최대 음량은 올림).
***참고, 최고, 최소 음량에 도달하면 도달하면 알려줍니다.**
*Xbox 콘솔에서만 작동합니다.

3.음소거 기능: 음소거 버튼으로 음소거 기능을 사용합니다. 음소거 표시등이 켜지면서 마이크 음소거 기능을 활성화합니다. 음소거 기능을 다시 끌려면 음소거 기능을 해제합니다. 마이크 음소거 기능을 누르고 있으면 음소거 기능이 잠시 해제됩니다. 버튼에서 손을 떼면 다시 음소거 기능을 사용합니다.

## 엑스트라 버튼 설정



엑스트라 버튼 설정 M 버튼 + L4/R4/L5/R5 버튼을 길게 누르면 Xbox 표시등이 천천히 깜박